
ALUMA designs

Stand-Off

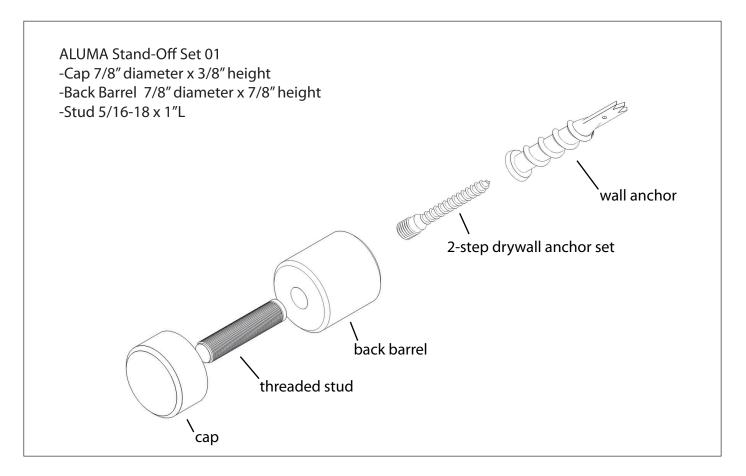



Aluma Stand-off Mounting Directions

(Arch-Cap Stand-off System)

Step 1- Carefully unwrap VETRO stand-off frame. Remove protective film from acrylic

Step 2- Place acrylic on wall where desired and mark hole locations on wall.

Step 3- With a #3 Phillips head screwdriver screw wall anchors in wall where marked be careful to screw the anchors in straight (they are self taping). Screw in 2-step drywall anchor set into wall anchor, screw back barrel into anchor set, screw threaded stud into back barrel making sure to leave 3/4" of threaded stud exposed from barrel for frame and cap, apply acrylic onto threaded studs, and secure with caps.